


Installation of numbers to Aluminum frames

Place a bead of Polyseam Seal Clear All-Purpose Adhesive caulk all around the back plate of the frame (3/8" of an inch from edge of frame). Place trim and number one at a time in the frame. Center the numbers and trim so the amount of space on the left and right side of frame is the same.

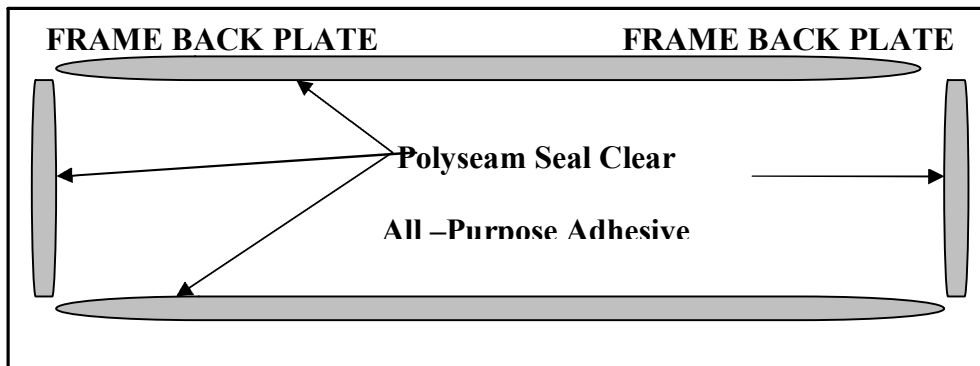

Make sure the number tiles line up on the top and bottom.

Let dry for twenty-four hours and hang on house with appropriate screws and anchors, preferably stainless steel.

Please feel free to contact us if you require any additional information.

Thank you, and enjoy!

Call us if you need us!

Telephone: 904-808-0507

Toll Free: 888-884-3772

Fax: 904-808-7370